

NTS Scale

* The capacity stated above is the internal volume of the tank. The fuel carrying capacity may vary depending on the positioning of the tank within the boat, the angle of the boat in the water and the location of breathers and fittings.

All measurements in millimetres

Revision Date

27/03/2025